

TECH LUX DUO


TL107002D

- Operating manual for 2nd screen



TECH LUX

 Important Safety Instructions

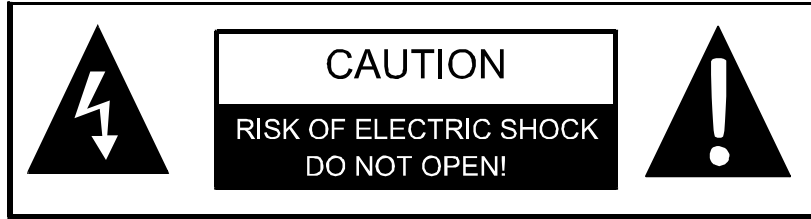

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OF MOISTURE.

CAUTION

1. To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is unused for a long period of time.
2. The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer or authorized unit.

WARNING

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

NOTES


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Maintain well ventilated conditions around the product. Do not put product on bed, sofa or anything that blocks ventilation. Install according to the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Read, heed and follow all instructions to ensure correct and safe installation and interconnection of the apparatus;
10. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus;
11. The mains socket-outlet shall be installed near the apparatus and the mains plug shall remain readily operable;
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
13. Only use attachments/accessories specified by the manufacturer.
14. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
15. Unplug the apparatus during lightning storms or when unused for long periods of time.
16. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Note: Do not touch the color TFT LCD screen by hand directly.

Contents


Important Safety Instructions	2
View of Front Panel	5
View of Side Panel	6
System Connection	7
Power Supply Preparation	8
Troubleshooting	9
Specifications	10

 View of Front Panel

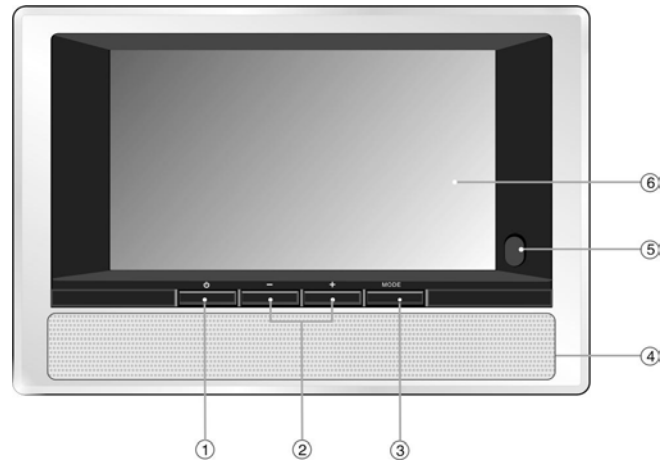

- 1. POWER button**
Press to access to or exit from the standby mode.
- 2. -/+ button**
Press to adjust the value of brightness and color.
- 3. MODE button**
Press to change the brightness and color level, press and hold for 1-2 seconds to change the aspect ratio.
- 4. Speaker**
- 5. Power Indicator**
In normal playback status, it doesn't indicate and it turns red in standby mode.
- 6. LCD Screen**

 View of Side Panel

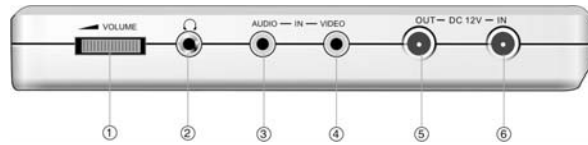

- 1. Volume Control**
Used to adjust the volume of the headphone and speaker.
- 2. Headphone Jack**
Used to connect headphones for private listening. When the headphones are connected to this jack, the speaker will be turned off automatically.
- 3. Audio Input Jack**
Used for audio input.
- 4. Video Input Jack**
Use for video input.
- 5. DC 12V Output Jack**
Used for output power to the master DVD player.
- 6. DC 12V Input Jack**
Used to connect the power adapter, including the car adapter.

Connect to Master DVD player

1. Make sure that the master DVD player, slave LCD screen and any other electrical equipment are off before connection.
2. Connect the car power adapter to the slave LCD screen and connect the slave LCD screen with the master DVD player using power supply cord to supply power to the master DVD player.
3. Use audio and video cables to connect the slave LCD screen with the master DVD player so that the master DVD player can input audio and video to the slave LCD screen.

 
Please see the figure below for details.



Note: The car power adapter must connect to the slave LCD screen, or the slave screen will have no power supply.

Connecting to Headphones/Earphones

Connect the headphones/earphones to the right side of the player for private listening.

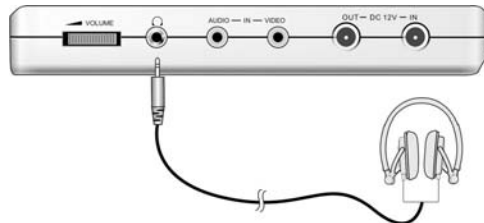


When headphones/earphones are connected, the speakers will automatically turn off.

Power Supply Preparation

Using your Car Power Adapter

 Connect the Car Adapter Power Plug to the slave LCD screen's power jack and plug the other end to the vehicle's cigarette socket as the figure shows below.

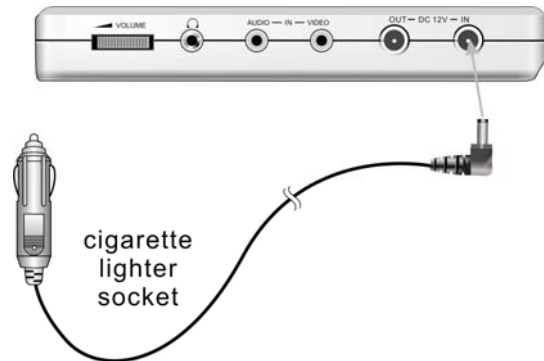

Attention

- Do not operate the unit or view video software while driving a vehicle.
- Place the unit in a proper position for viewing.
- Disconnect the player from the Car Adapter when starting the vehicle.

SYMPTOM	HOW TO CHECK
There is no sound.	<ul style="list-style-type: none">- Make sure system connection is correct.- Make sure the speakers are turned on.- Make sure the audio source is correct.
There is no picture.	<ul style="list-style-type: none">- Make sure LCD screen is on and in correct video mode.- Make sure your system connection is correct.- Make sure the video source is correct.

Others possibilities:

Static or other external interference may cause the unit display abnormally. In order to recover normal status, unplug the power-supply cord and then plug it in to reset the unit. If the problems still exist, disconnect the power and consult your service center or a qualified technician.

Specifications

TFT screen size	7 inches
Video System	PAL
Frequency Response	20Hz-20kHz \pm 2.5dB
Power	DC 9.5-12V
Power Consumption	<25W
Dimensions	230mm x 154mm x 22mm (L*W*D)
Weight	0.37kg

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE



2005.10